




DC DOOR LEFT & RIGHT HAND HINGE

OPERATION MANUAL

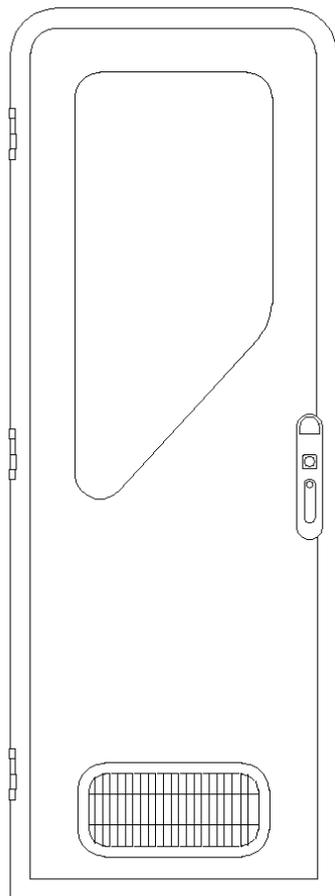

READ CAREFULLY BEFORE USING
RETAIN MANUAL FOR FUTURE REFERENCE



Read this installation instruction thoroughly.
Incorrect installation or operation may void any warranty.
Incorrect use or operation may cause serious injury.

LEFT HAND HINGE — OPERATION

OPERATE LEFT HAND HINGE DOOR FROM OUTSIDE:

1. **To Unlock** — Insert key into lock cylinder (see Diagram 3) and turn approximately 33 degrees anti-clockwise. Turn key back to original position and then the key can be removed.
2. **To Open** — Rotate outer handle (see Diagram 3) anti-clockwise approximately 45 degrees and then pull the handle to open the door, outer handle will return to normal position.
3. **To Separate Security Door from Outer Door** — Only when the door is open, rotate release lever anti-clockwise (see Diagram 4) and this will allow the two (2) doors to separate (to rejoin, simply close together firmly).

⚠ WARNING: DO NOT SEPARATE FLYSCREEN PRIOR TO OPENING DOOR.

4. **To Close Door** — Rejoin security door and outer door by closing together firmly. Close door into frame. Ensure the center lock tongue engages the center striker plate.

IMPORTANT: At this point the door is simply closed and is not securely locked, and can still be opened by rotating handle(s) outside or inside.

NOTE: The outer door can be joined before or after the security door is closed/locked. In either case ensure that both top and bottom striker catches are activated to prevent the outer door opening when travelling.

⚠ WARNING: BEFORE TRAVELLING THIS DOOR NEEDS TO BE FULLY SECURED & LOCKED.



SCAN HERE FOR VIDEO TUTORIAL TO SECURE & LOCK THE AUSSIE TRAVELLER DC DOOR

<https://www.youtube.com/watch?v=rt-SwZ536d8>

5. **To Lock Door** — Close as per step 4. Rotate outer handle approximately 45 degrees (see Diagram 3) clockwise to pull top and bottom striker bolt to the bottom of the striker. Insert key into lock cylinder (see Diagram 3) and turn approximately 33 degrees clockwise. Key will return back to original position itself and then can be removed. Door is now locked. (The outer handle cannot be rotated in an anti-clockwise direction.)

NOTE: Door will not lock with key if the top and bottom striker bolts are not pulled to the bottom of the striker.

OPERATE LEFT HAND HINGE DOOR FROM INSIDE:

1. **To Unlock** — Turn deadlock catch (see Diagram 4) clockwise and then rotate inner handle approximately 45 degrees (see Diagram 4) clockwise to unlock/open door.
2. **To Lock** — Close door as in step 4 of outside operation. Rotate handle approximately 45 degrees (see Diagram 4) anti-clockwise to pull top and bottom lock bolts to the bottom of the striker. Rotate dead lock catch (see Diagram 4) anti-clockwise to lock. (The inner handle cannot be rotated in clockwise direction).

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

LEFT HAND HINGE — DIAGRAMS



Diagram 1.
Left hand hinge door



Diagram 2.
Outside left hand hinge door



Diagram 3.
Outside view of left hand lock

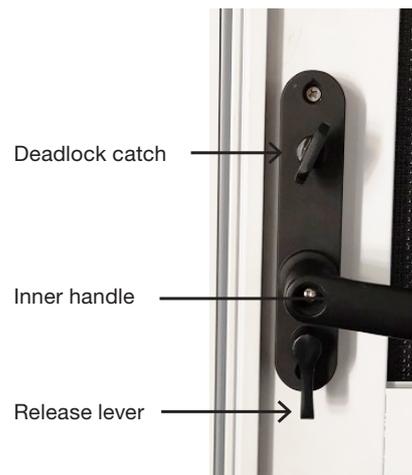


Diagram 4.
Inside view of left hand lock

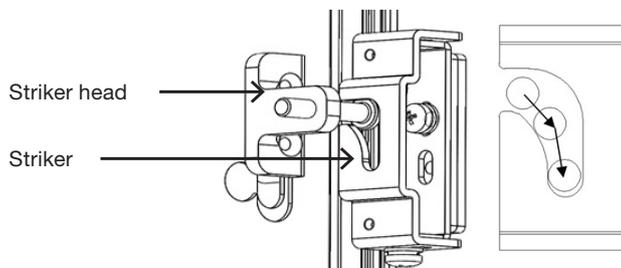


Diagram 5.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

RIGHT HAND HINGE — OPERATION

OPERATE RIGHT HAND HINGE DOOR FROM OUTSIDE:

1. **To Unlock** — Insert key into lock cylinder (see Diagram 8) and turn approximately 33 degrees clockwise. The key will return back to original position itself and then the key can be removed.
2. **To Open** — Rotate outer handle (see Diagram 3) clockwise approximately 45 degrees and then pull the handle to open the door, outer handle will return to normal position.
3. **To Separate Security Door from Outer Door** — Only when the door is open, rotate release lever clockwise (see Diagram 4) and this will allow the two (2) doors to separate (to rejoin simply close together firmly).

⚠ WARNING: DO NOT SEPARATE FLYSCREEN PRIOR TO OPENING DOOR.

4. **To Close Door** — Rejoin security door and outer door by closing together firmly. Close door into frame. Ensure the centre lock tongue engages the centre striker plate.

IMPORTANT: At this point the door is simply closed and is not securely locked, and can still be opened by rotating handle(s) outside or inside.

NOTE: The outer door can be joined before or after the security door is closed/locked. In either case ensure that both top and bottom striker catches are activated to prevent the outer door opening when travelling.

⚠ WARNING: BEFORE TRAVELLING THIS DOOR NEEDS TO BE FULLY SECURED & LOCKED.



SCAN HERE FOR VIDEO TUTORIAL TO SECURE & LOCK THE AUSSIE TRAVELLER DC DOOR

<https://www.youtube.com/watch?v=rt-SwZ536d8>

5. **To Lock Door** — Close as per step 4. Rotate outer handle approximately 45 degrees (see Diagram 8) anti-clockwise to pull top and bottom striker bolt to the bottom of the striker. Insert key into lock cylinder (see Diagram 8) and turn approximately 33 degrees anti-clockwise. The key will return back to original position itself and then can be removed. Door is now locked. (The outer handle cannot be rotated in a clockwise direction.)

NOTE: Door will not lock with key if the top and bottom striker bolts are not pulled to the bottom of the striker.

OPERATE RIGHT HAND HINGE DOOR FROM INSIDE:

1. **To Unlock** — Turn deadlock catch (see Diagram 9) anti-clockwise and then rotate inner handle approximately 45 degrees (see Diagram 9) anti-clockwise to unlock/open door.
2. **To Lock** — Close door as in step 4. Rotate handle approximately 45 degrees (see Diagram 9) clockwise to pull top and bottom lock bolts to the bottom of the striker. Rotate dead lock catch (see Diagram 9) clockwise to lock. (The inner handle cannot be rotated in anti-clockwise direction).

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

RIGHT HAND HINGE — DIAGRAMS

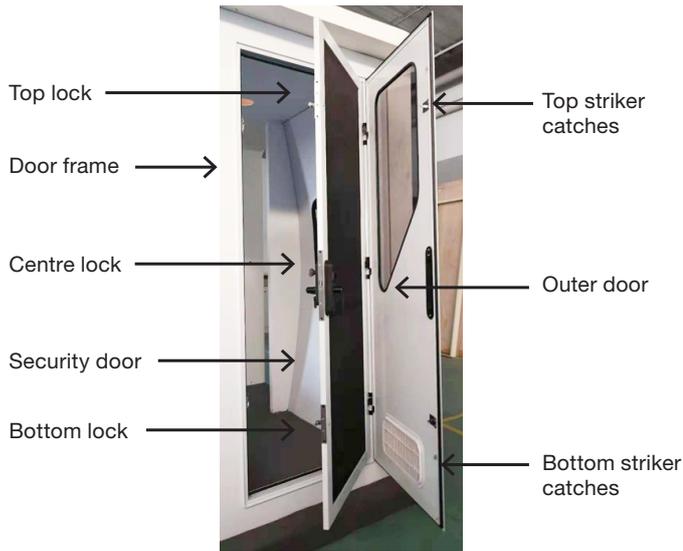


Diagram 6.
Right hand hinge door



Diagram 7.
Outside right hand hinge door



Diagram 8.
Outside view of right hand lock



Diagram 9.
Inside view of right hand lock

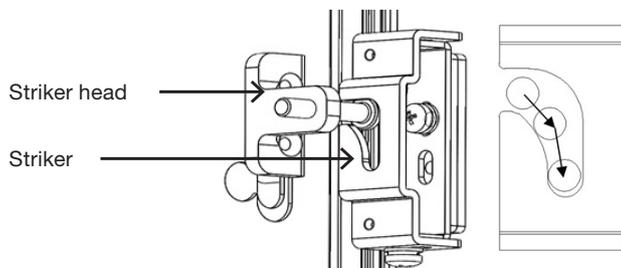


Diagram 10.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

COMPRESSION LOCK — OPERATION

1. After door is installed, the lock can be opened and closed freely, and the door can be closed with a little force, and the central lock tongue can be easily engaged with the centre striker plate.
2. Rotate the handle, the top and bottom dead bolts can move up and down smoothly in the strikers. The force to rotate the handle is appropriate. Easy to unlock/lock with the key and deadlock catch. And the key can turn back to original position automatically.
3. Rotate the release lever, the outer door and the Security door can be automatically separated. If the release lever is not rotated, the security door and the outer door must not be separated. The outer door and the security door can be joined easily.

NOTE:

- The handle and key must be rotated into place.
- The lock is debugged before leaving the factory. If the dead bolt does not smoothly engage with the striker as Diagram 11, the striker can be adjusted up and down as Diagram 12.
- If the force of rotating the handle is too big or if the door is not closed tightly, the striker can be adjusted back and forth as in Diagram 13.

COMPRESSION LOCK — DIAGRAMS

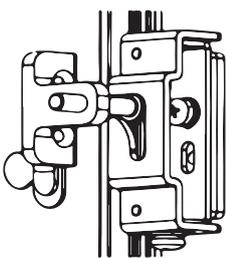


Diagram 11.

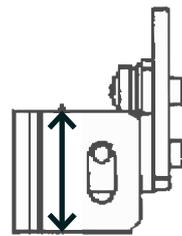
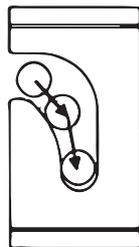


Diagram 12.

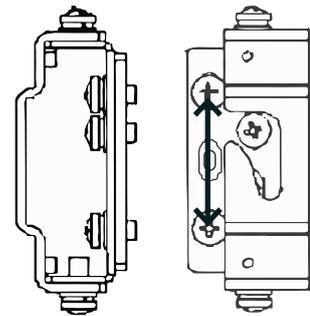


Diagram 13.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

ADJUSTMENT & TROUBLESHOOTING

FIXING THE COMPRESSION LOCK RUBBER TRIM

1. When the wall thickness is 30-35mm, use rubber trim (MD-XJT-002) as in Diagram 14.
2. When the wall thickness is 25-29mm or 36-40mm, use rubber trim (MD-XJT-004) as in Diagram 15.

NOTE:

- It is necessary to tighten the rubber trim to prevent wrinkling.
- The rubber trim at the strikers needs to be cut off.
- The rubber trim joints should be glued.
- If the rubber trim warps at corners, glue or double-sided tape can be used.

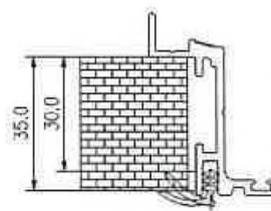


Diagram 14.

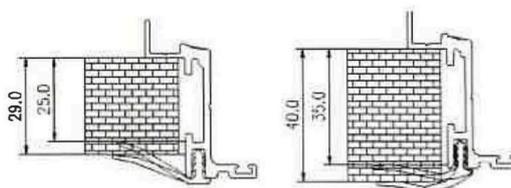


Diagram 15.

FIXING STRIKER BACK BRACE

Fix striker back brace with M5x12 as Diagram 16.

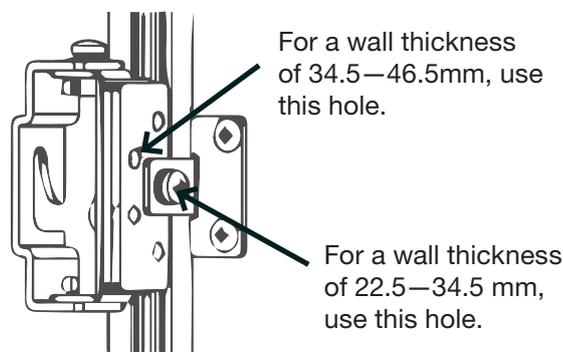


Diagram 16.

FIXING THE STRIKER COVER

Fix striker plastic cover as Diagram 17.

Install the “D” shaped door holder to the wall of the caravan. Please eliminate all glue material around the door.

NOTE:

- The door cannot be used before it is fixed firmly.
- During travel, ensure that the door is in a lock state.
- Do not rotate the handle freely when the door is open. If you do that, the dead bolt will hit the striker when closing the door.

NEVER TRAVEL WITHOUT THE DOOR BEING LOCKED

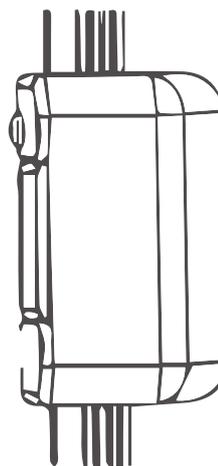


Diagram 17.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

WARRANTY STATEMENT

Aussie Traveller Pty Ltd ACN 642 775 460 (**Aussie Traveller**) offers the following warranty in relation to the products it supplies directly or through an authorised manufacturer, dealer or approved service repair agent (**Product**).

Australian Consumer Law

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

If you are a consumer as defined in the Australian Consumer Law: *Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*

Warranty

Aussie Traveller warrants that, subject to the exclusions and limitations below, all parts of the manufacture and assembly of the Product will be free from defects in materials and workmanship (**Warranty**) for a period of 12 months from the date of purchase as follows:

1. This Warranty is activated at the time of purchase by the final retail customer (being the owner of the Product).
2. In the event the Product is purchased by a manufacturer, dealer or approved service repair agent, this Warranty will commence at the time the final retail customer makes payment for the Product to the wholesale purchaser.
3. If the Product is purchased directly from Aussie Traveller for use by final retail customer and not to be on sold in any way, the Warranty will commence at the time of the original purchase.

Warranty Period

This Warranty cannot be assigned or transferred to a subsequent owner of the Product.

The purchaser or final retail customer should inspect the Product immediately when received or at vehicle handover, to ensure that it appears free from any damage or defect, and matches the description provided.

If after accepting the Product, a defect appears in the manufacture or assembly of the Product before the end of the Warranty Period and Aussie Traveller finds the Product to be defective in materials or workmanship, Aussie Traveller will, in its sole discretion, either:

- a. replace, repair or refund the Product or the defective part of the Product free of charge; or
- b. cause the Product or the defective part of the Product to be replaced or repaired by a qualified repairer free of charge.

In arranging Warranty inspection, service and repair, Aussie Traveller will seek to provide the details of an approved service agent within your geographic area. Should one not be available, or if the Product is in use in travel, Aussie Traveller reserves the right to seek to arrange a repair or replacement at the next available location on the route of travel.

Aussie Traveller reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the Product.

Aussie Traveller Awning Products

This Warranty covers specified defects in materials or workmanship for Awning Products as follows:

1. The vinyl fabric is warranted against:
 - a. holes caused by mildew (mildew will form on dust and dirt and stain fabric if fabric is not kept clean).
 - b. excessive cracking, peeling, hardening or loss of strength while used under normal conditions.
 - c. excessive fading (a slight colour change may occur due to ultraviolet rays).
2. All hardware components including the roller are warranted not to bend or break under normal use (excluding high winds, water pooling and accidents).

Making a Warranty Claim

If a defect covered by this Warranty appears, the Customer must first contact Aussie Traveller within 7 days of first becoming aware of the defect. Aussie Traveller will assist the Customer to rectify and resolve any Product issue that may arise.

When making a claim under this Warranty, Aussie Traveller requires that the following information be provided before any further action will be taken.

1. Original Invoice (Document or Number);
2. Make and model of the Product;
3. Make and model of the vehicle (if Product fitted);
4. Vehicle build date (if Product fitted);
5. Vehicle chassis number;
6. Description of damage and/or repair required;
7. Photos of the damage and/or repair; and
8. Appropriate documentation (such as historical and maintenance records).

Aussie Traveller reserves the right to request more information or images should what is provided not be sufficient to make an assessment for the Warranty claim.

The Product must be made available to Aussie Traveller or its authorised repair agent for inspection and testing. If such inspection and testing find no defect in the Product, the final retail customer must pay Aussie Traveller's usual costs of service work and testing.

The final retail customer must bear the cost of the transport of the Product to and from Aussie Traveller or the authorised repair agent, and all insurance of the Product.

Exclusions

This Warranty will not apply where:

- the Product has been repaired, altered or modified by someone other than Aussie Traveller, or without the written consent of Aussie Traveller or an authorised repair agent;
- the alleged defect in the Product is within acceptable industry tolerances and variances;
- Aussie Traveller cannot establish any fault in the Product after testing and inspection;
- the Product has been used other than for the purpose for which it was designed;
- the alleged defect in the Product has arisen due to the final retail customer's failure to properly use and maintain the Product in accordance with any of Aussie Traveller's instructions, recommendations and specifications (including applicable maintenance schedules);
- the alleged defect in the Product has arisen due to the final retail customer's request to customise the Product;
- the Product has been subject to abnormal conditions, including environment, temperature, high or excessive wind, water, fire, humidity, pressure, stress or similar;
- the alleged defect has arisen due to abuse, misuse, neglect or accident;
- unauthorised parts or accessories have been used on or in relation to the Product;
- the Product has been overloaded or involved in an accident;
- the alleged damage or defect has been caused by normal wear and tear;
- the alleged damage to fabric has been caused by storm, wind or rain, or stretching of fabric caused by water pooling on fabric;
- breakage or bending of hardware components has been caused by storm, wind or rain, or water pooling on fabric.

Replacement Warranty Item

If, under Warranty, a Product is replaced or repaired by Aussie Traveller or an Aussie Traveller agent, unless provided in writing to indicate otherwise, the replacement Product will carry the **remaining** Warranty terms and conditions, including length of time, of the original purchased Product.

Change of Mind

Aussie Traveller understands that at times, final retail customers may change their mind. Choose carefully as return and credit requests for items purchased by mistake or "change of mind" reasons may not be approved. Aussie Traveller will not accept Product returns under these circumstances unless by written approval by an authorized Aussie Traveller representative. If approved, an administration and restocking fee may apply.

Limitations

Aussie Traveller makes no express warranties or representations other than set out in this Warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of Aussie Traveller's liability under this express Warranty.

Contact

Australia Wide: 1300 663 868

Melbourne Office

235 Barry Road
Campbellfield, Melbourne, 3061
Ph: +61 3 9357 6565
enquiries@aussietraveller.com.au

Brisbane Head Office, Factory & Showroom

11-15 Oasis Court
Clontarf, Brisbane, 4019
Ph: +61 7 3284 3284
enquiries@aussietraveller.com.au

To receive a copy of the Aussie Traveller Warranty Terms & Conditions or information regarding specific Aussie Traveller products, please contact Aussie Traveller Head Office on (07) 3284 3284 or email enquiries@aussietraveller.com.au.