 




SafetyDave

 
Fire safety, first aid & rear vision systems

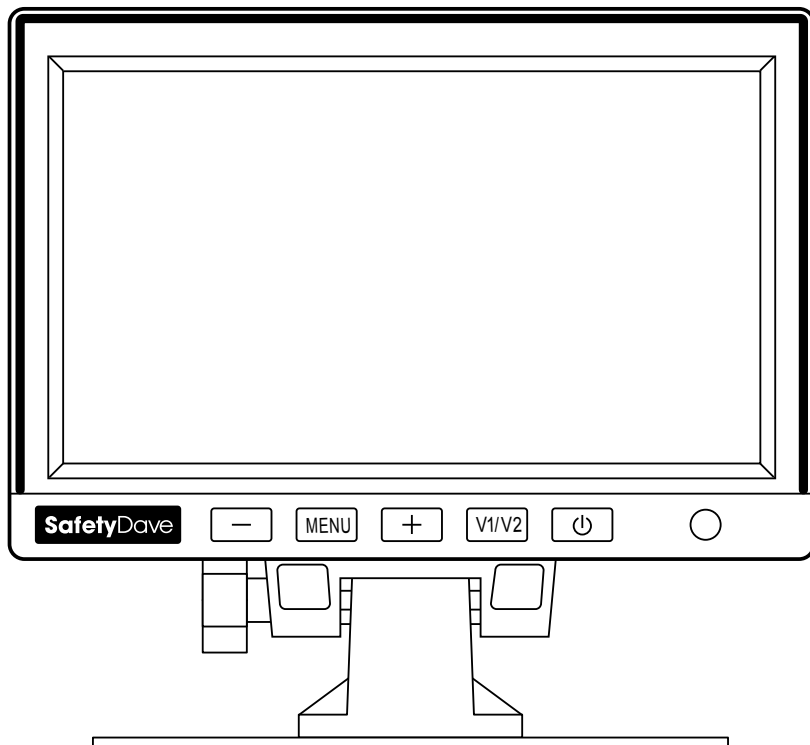

User Manual

6" HD MONITOR SDAHD6

COMPONENTS

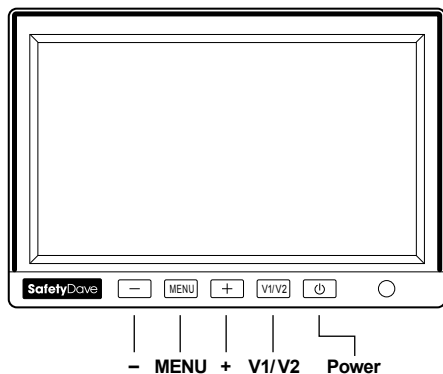

Operating Monitor

When the monitor is powered on a blue screen is displayed, the wording “no signal” will appear in the centre of the screen. When viewing Channel 1, a (CH1) symbol will appear in the top right-hand corner of the screen and when viewing Channel 2, a (CH2) symbol will appear in the top right-hand corner of the screen.

Menu Functions

Press the menu button each time for the following selections.

Adjustments can be made by pressing the (+) button to increase (–) button to decrease to the desired level.

- Brightness
- Contrast
- Colour
- Hue(hue is invariant to brightness)
- Volume
- Ratio 16.9/4.3 (Size of image on the Monitor screen)
- L/R (Mirror Image Left to Right)
- U/D (Flips Image Upside down)
- Reset (Reset system back to default)

Monitor Specifications

Dimensions 153mm(W) x 104.8mm(H) x 28.5mm (D)

Weight 320 Grams

System PAL/NTSC

DC Input 12/24V

Resolution 1024 x 600

Monitor heat rating 70 °C

 
Maintenance

If Monitor is **NOT** in use, Keep in safe place away from **HIGH** humidity, sunlight, temperatures conditions.


INSTALLATION INSTRUCTIONS

Vehicle Components


6" HD Monitor SDAHD6

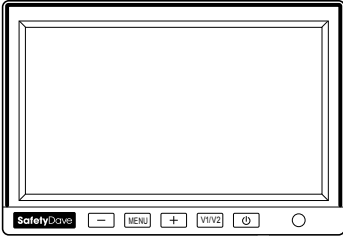

Suction Mount

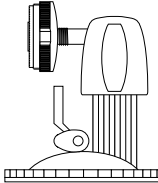 


Dash Mount

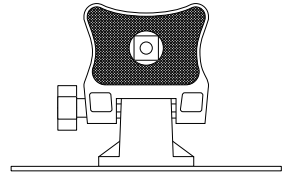


Dust Cap (for use on standard 4 pin cable)



Power Loom SDAHD6

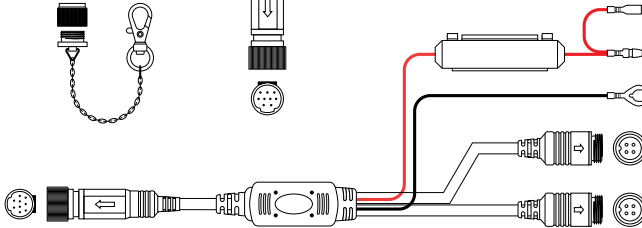

7.5m 4 Pin Cable

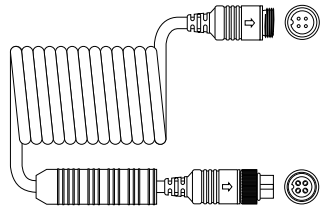


*Monitor Bag diagram not shown

Optional Parts


Woza Single

For single camera on the caravan

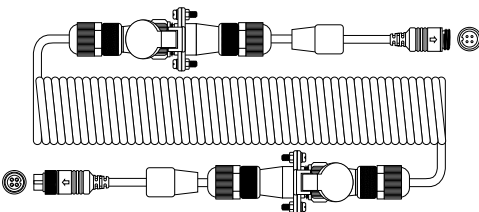


Woza Double

For Two cameras on the caravan

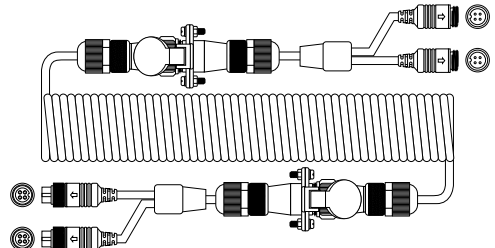

WIRING INSTRUCTION

Power Loom

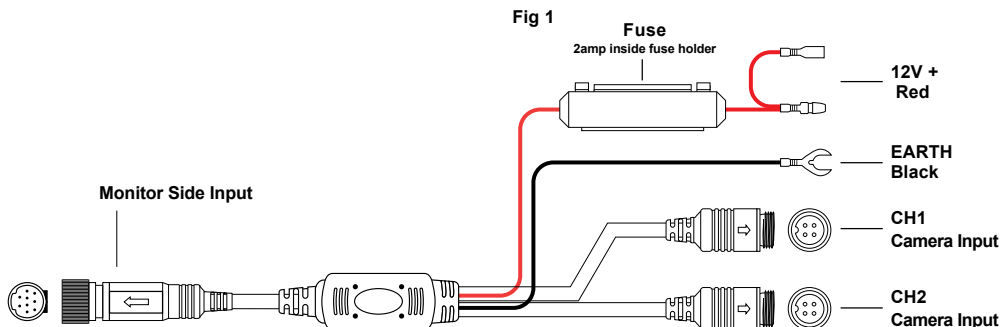

Single Camera on the Van

Connect the 7.5m to CH1 on the Power Loom

If two cameras on the rear of the caravan you will need to use CH2. (connect additional 7.5m cable to CH2)

Red cable to 12/24V+ to Ignition power from the vehicle.

Black cable to a good ground source.

To avoid incorrect cable installation, start from the front of the vehicle and work towards the rear of vehicle.

All cables are marked with an arrow on each end for correct connection.

Trouble Shooting

Monitor not turning on

- Check the fuse located on the Power loom (page 4 Fig1) if blown.
- Fuse in contact. Check earth to system

Monitor showing blue screen (No Signal)

- Ensure all connections are secured & connected arrow to arrow on the ends
- Ensure you are on the correct channel on the Monitor (AV1 or AV2)
- Ensure the Caravan or camera is connected to the system